



Acuatic Vacuum Daily Maintenance

Acuatic Vacuum
serial number

[illegible]

Daily Maintenance

Door seal: Clean the door seal and chamber face with a lint free cloth and soapy water. Check the door seal for any signs of damage.

Water: Drain both reservoirs at the end of the day. Leave the Acumatic Vacuum door open overnight.